



FEP Release Liner Removal Guide for ARLON® Products


1. Remove clear FEP release liner from the ARLON® product

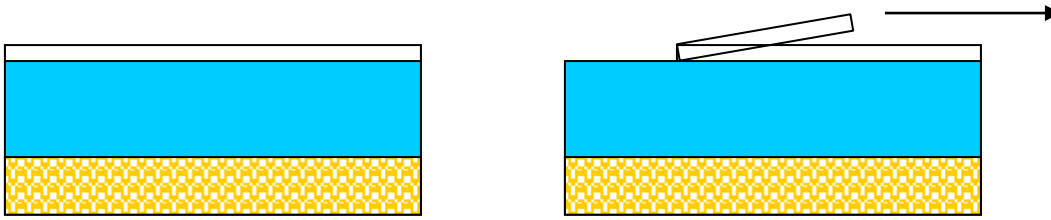

2. Apply uncured rubber sheet to the substrate and remove entrapped air

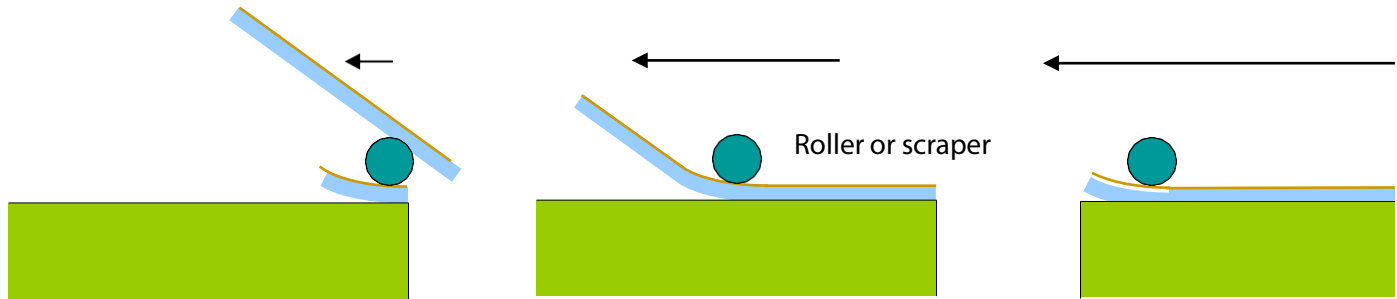

3. Remove brown PTFE-coated fiberglass substrate

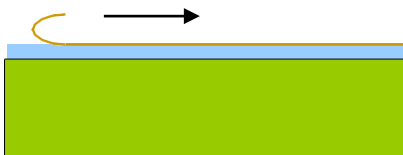

4. Apply another substrate (it is helpful to allow the adhesive to wet-out and mate with surfaces)

